




KK 2

KF 3

KBC 1

KL 4

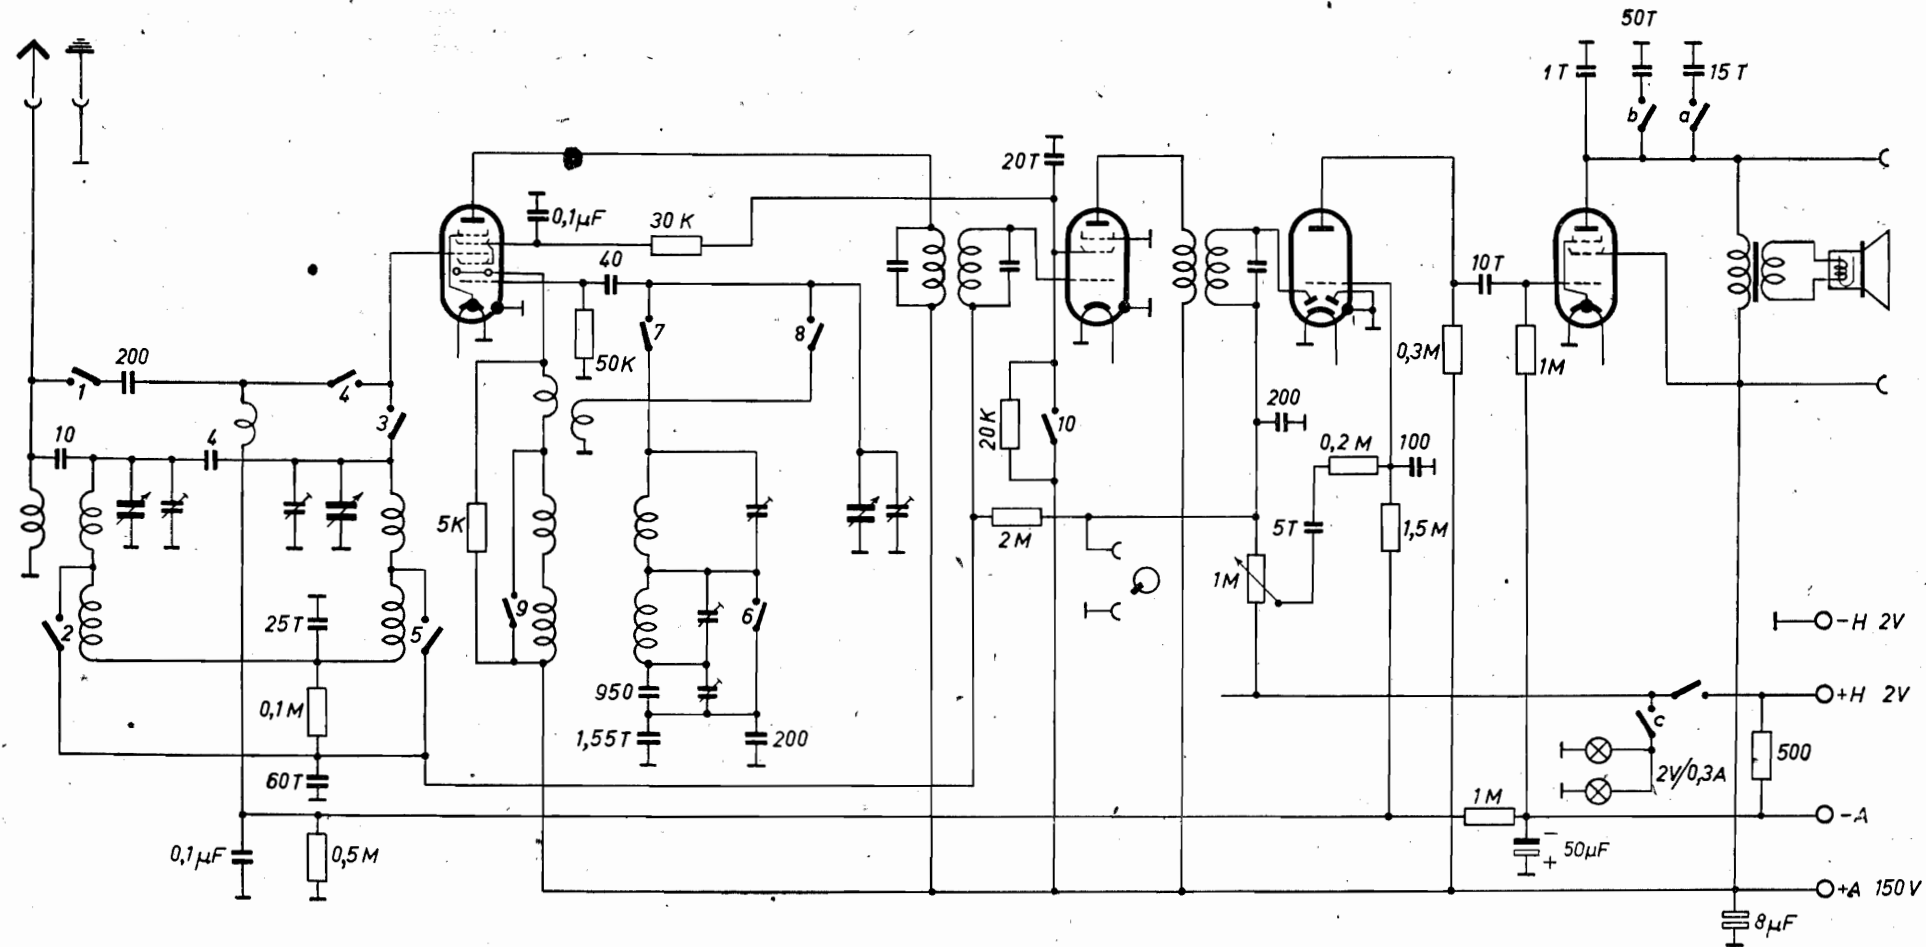

Tonschalter	a b c		
	I.		
II.	•		
III.		•	
IV.			•

Schalter	1	2	3	4	5	6	7	8	9	10
Kurz	•			•				•	•	•
Mittel		•	•		•	•	•			
Mittel lokal			•		•	•	•			
Lang				•			•			
⊙				•			•			

ZF = 128 kHz

Philips Beseda 4B