

Philips Serenata A


AZ 1




AB 2

AF 7

AL 4

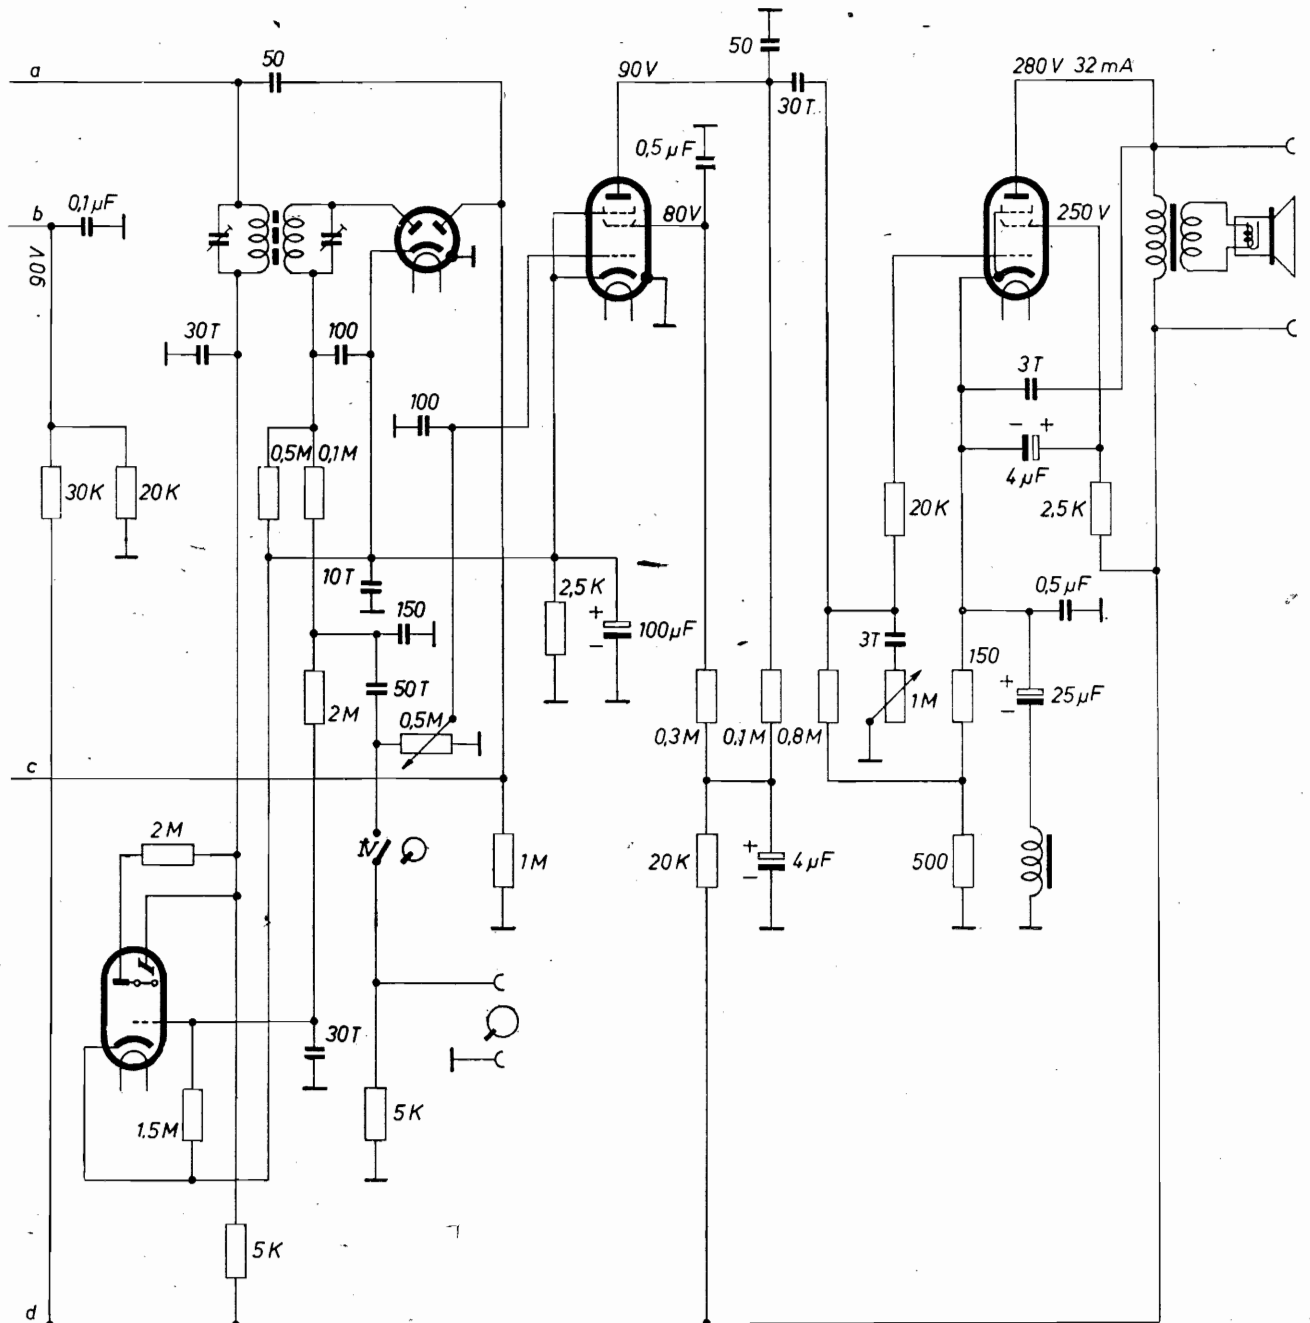

Beleuchtg. u. Gramo-Schalt.

 

Schalter	1	2	3	4	5	8	9	10	11	13	14	15	16	17
Kurz	•			•	•				•	•				
Mittel			•	•		•		•					•	•
Lang		•						•			•			•
⊙	•				•				•					

ZF = 128KHz

AM 1

Philips Serenata A