

Philips Serenata U


CY1 U1220/6 C1



CB 2

CF 7

CL 4

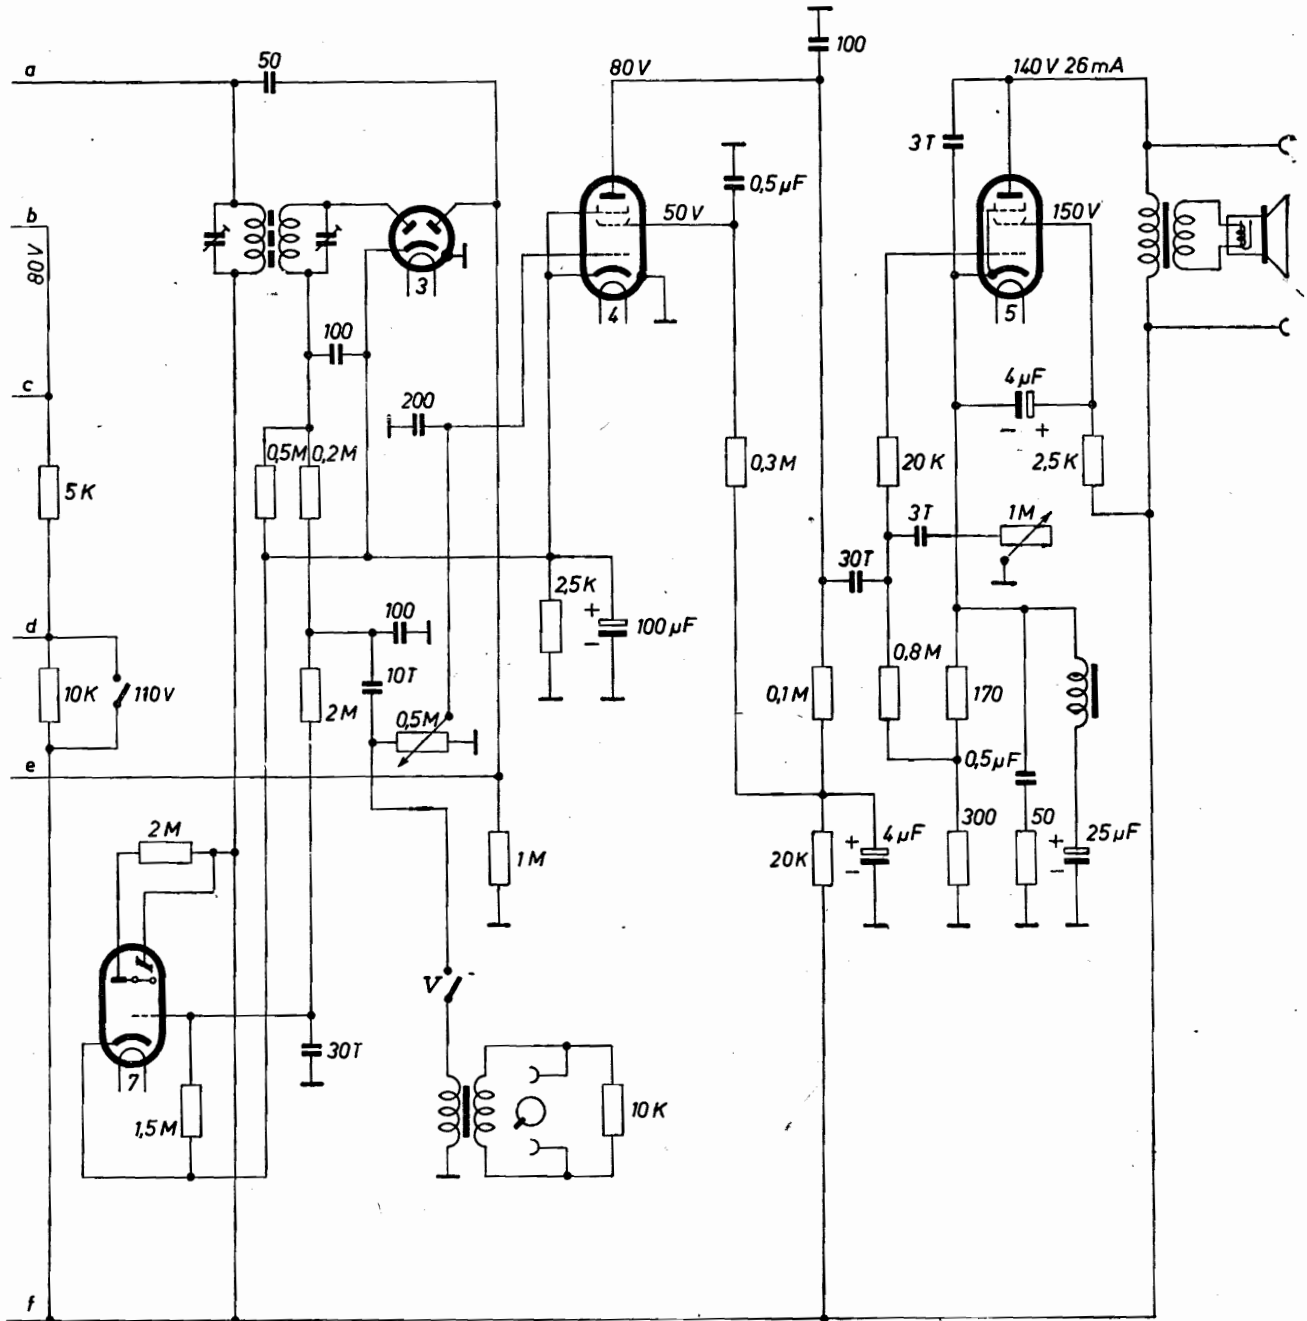

Beleuchtg. u. Gramo-Schalt.



Schalter	1	2	3	4	5	8	9	10	11	13	14	15	16	17
Kurz	•			•	•					•	•			
Mittel			•	•		•			•				•	•
Lang			•					•				•		•
⌀	•				•				•					

ZF = 128 KHz

EM 1

Philips Serenata U