

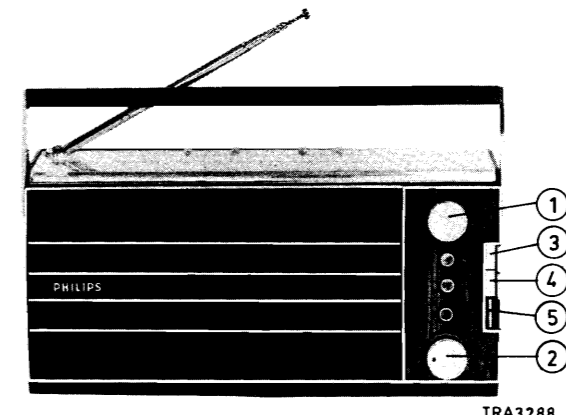
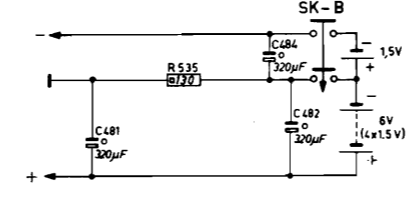


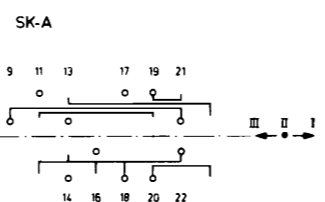

servicegegevens

S	418	417	418	419	422	421	420	426	424	425	432	427	428	429	430	431	433																																		
C	434	435	483	436	437	439a	-b	438	440	448	441	439c	-d	-e	-f	445	442	443	444	446	455	456	457	450	458	439h	-g	459	460	451	461	463	462	465	464	466	467	468	473	474	469	470	476	471	472	477	478	481	479	484	482
R	490	491	482	493	494	495	505	500	506	515	507	508	509	501	511	510	512	513	514	516	517	518	523	519	525	526	527	528	520	521	529	530	531	532	533	534	535	536													

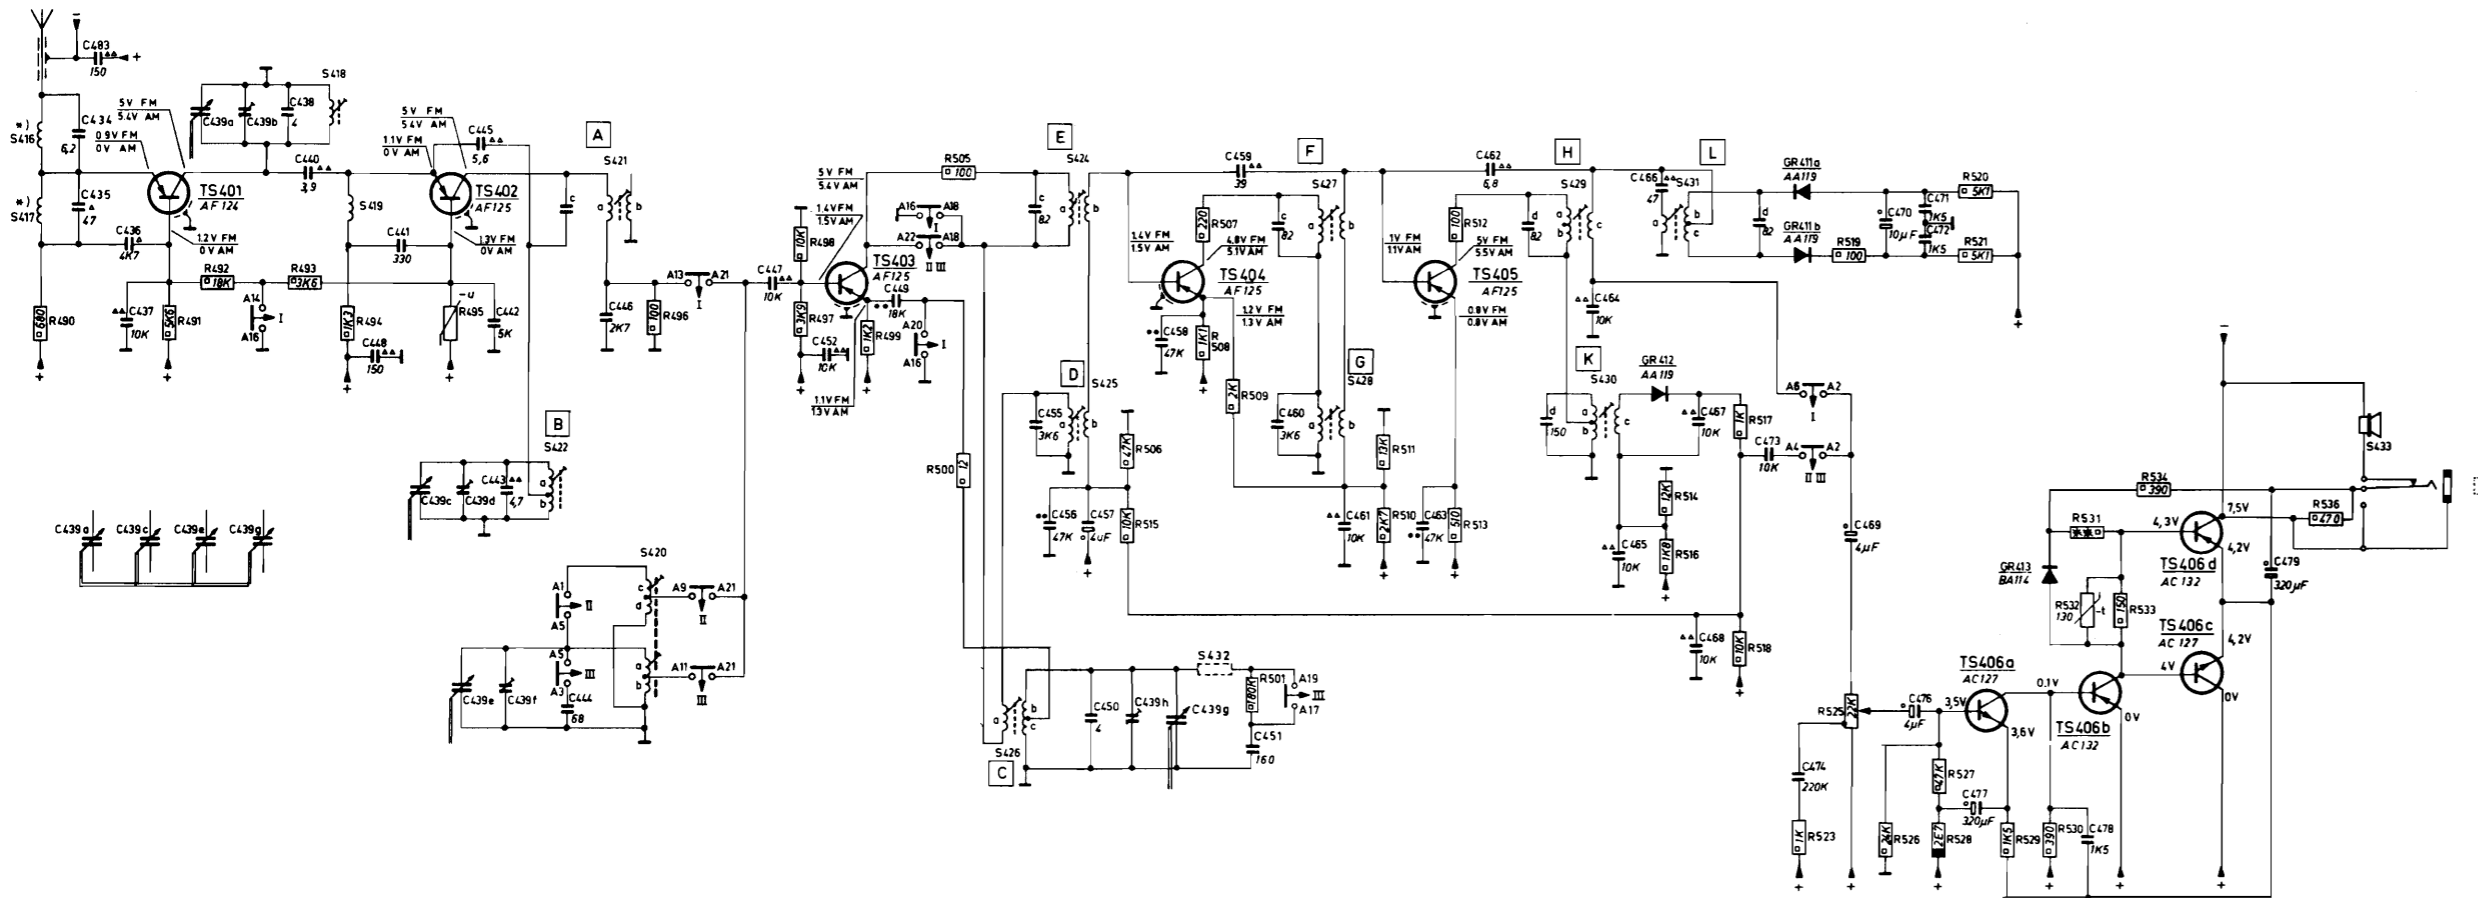


- BEDIENINGSORGANEN
- 1 Afstemming (C439)
 - 2 Geluidsterkte + aan/uit (R525+SK-B)
 - 3 FM
 - 4 Middengolf
 - 5 Langegolf

CODENUMMERS

Kast, compleet (OOR) zwart	4822 420 40165	S420a, b, c, d	4822 158 60243
Kast, compleet (OOB) beige	4822 420 40164	S421a, b	4822 153 50033
Venster op front	4822 466 70159	S424a, b	4822 153 50033
Achterwand (OOR) zwart	4822 420 40166	S427a, b	
Achterwand (OOB) beige	4822 420 40167	S422a, b	4822 156 40338
Handgreep	4822 498 60197	S425a, b	4822 156 40086
Veer voor bevestiging handgreep	4822 492 61337	S428a, b	
Telescoop-antenne	4822 303 30057	S426a, b, c	4822 156 30089
Batterijhouder	4822 256 60168	S429a, b, c	4822 153 50031
Deksel van batterijhouder (OOR) zwart	4822 423 40237	S430a, b, c	4822 153 10101
Deksel van batterijhouder (OOB) beige	4822 423 40238	S431a, b, c	4822 153 50032
Batterij contactveer "-"	4822 492 50429	S433	4822 240 40054
Batterij contactplaat "-"	4822 492 61026	S439a, b	4822 125 20023
Batterij contactplaat "+"	4822 492 61027	c, d	
Knop, afstemming + geluidsterkte	4822 413 40402	e, f	
		g, h	
Klemveer knop	4822 492 60705	R495	4822 116 20063
Druktoets, FM - LG	4822 410 20774	R525	4822 101 50063
Druktoets, MG	4822 410 20775	R532	4822 116 30016
Schuifschakelaar	4822 277 30299	C438	4822 122 30003
Schuif van schuifschakelaar	4822 278 20225	C441	4822 121 50369
Schakelaar mechanisme, golfgebied	4822 310 20187	C442	4822 122 40002
Aansluiting oortelefoon	4822 267 30043	C444	4822 121 50011
Moer voor bevestiging oortelefoon-aansluiting	4822 505 10043	C446	4822 122 30057
Trommel op variable condensator	4822 528 80348	C450	4822 122 30003
Snaarwiel	4822 528 80347	C451	4822 121 50119
Wijzer	4822 450 80235	C455, 460	4822 121 50088
Andrijfsnaar	4822 321 30102	C471, 472	4822 122 30052
Ruitertje op schaal	4822 450 80187	C474	4822 121 40061
Schaal	4822 333 50271	C478	4822 122 30052

Voor verdere gegevens en trimvoorschriften wordt verwezen naar de volledige servicedocumentatie.

DE SNARENLOOP IS GETEKEND BIJ DE STAND "MINIMUM CAPACITEIT" VAN DE VARIABLE CONDENSATOR.

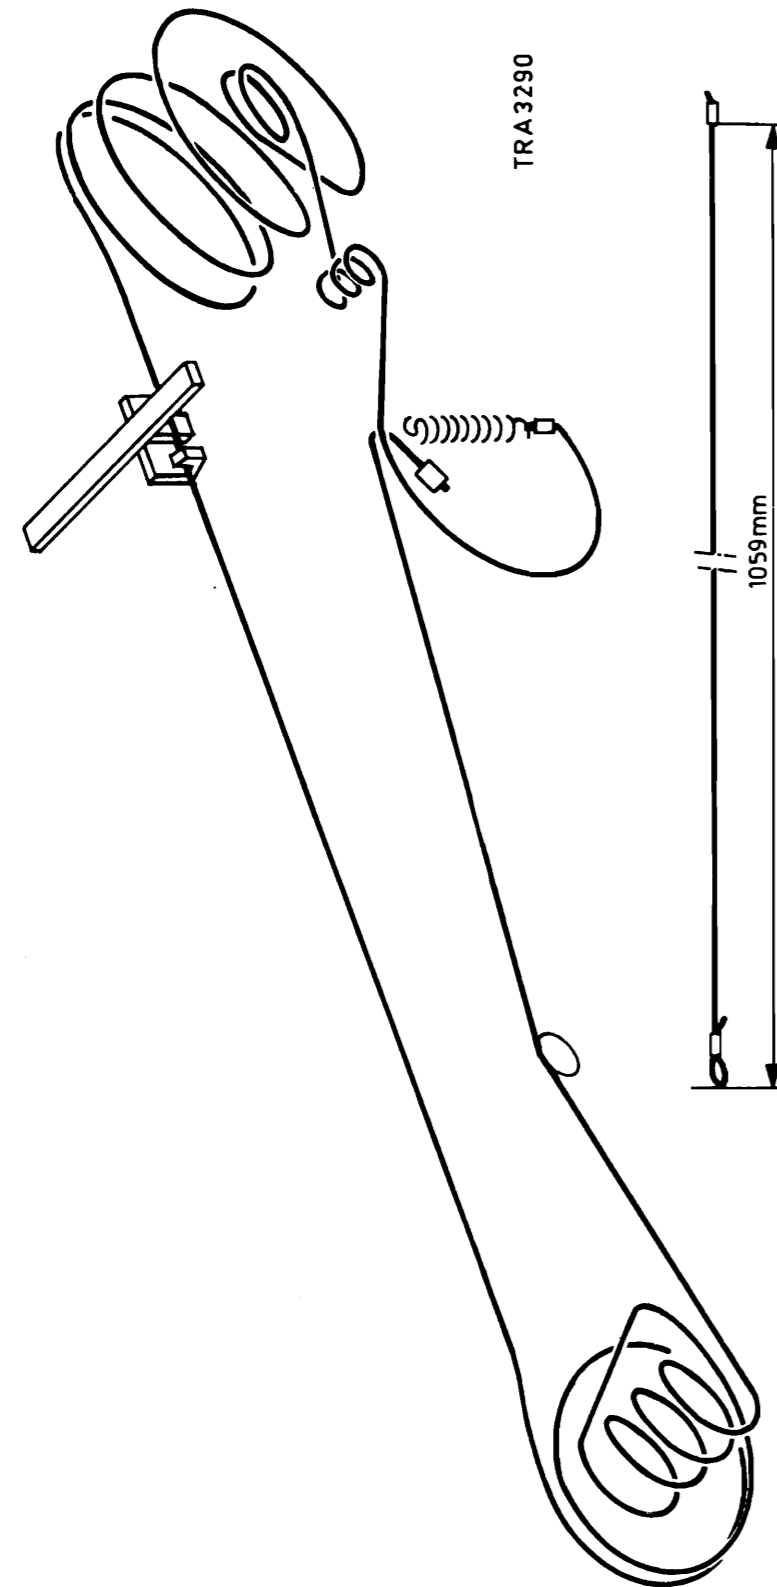

S		420ed	416.	417	E. 420cb	D.G.F	419 A. 418	B L.H	K	S														
C	479.	481.	483.	476.	452	447	435. 436	460.437.459	451	440.461.463.446.462.	466.441.	473. 468	471	472	470.	C								
C	477	478		434.		449	456.457	455	458	450.	445	446.442.	448	444.464	443	438	467	465	469.	C				
R	534.	532	535		529	528.	526	467.	490.	492	491	511	493	495.	513.	494.	515	519	520	521	516	R		
R	531.	533.			530.	527.		498	499	505	506.	500	507	501	509	496.	510.	508	512		518	514.	517	R

