


R	1, 5,	7, 6,	8, 9,	16,	10,	19, 18, 17, 16,	2,	21,	22, 23,	26,	27, 28,	36, 31, 31, 1, 34, 32, 33, 42,	82,	62, 50, 48, 51, 52, 49, 53,	54,	39, 40,	38, 55,	56, 57, 58, 59,	60, 75, 76, 77, 78, 79, 80,	60, 65,	66,	64, 67, 68,	69, 81,	72, 71, 70,		
C	2, 1, 3, 4,	10, 5,	9,	14, 15, 33, 37, 38, 7, 8, 13, 11, 17, 18, 12, 16, 40, 44, 45, 19, 46, 51, 43, 52, 36,	47,	54, 53, 19,	23, 26, 29, 22, 25, 28, 7, 24, 27, 20, 21,	55, 56,	57, 58,	62, 61,	65, 66, 64, 63,	71, 67, 68, 69, 70, 72,	75, 76, 73,	74, 88, 81, 77, 78,	82,	87, 86, 84,	85,	83, 91, 92, 93,	101, 94,	90, 95, 96, 97, 110, 98, 99, 111, 112, 34, 113,	35,	114,	103,	102, 115, 116,	105, 104,	
L	1, 2,	4,	13, 14, 13, 3, 1, 6, 7, 7, 5,	8, 18, 15, 16, 17, 19, 19, 20,	9, 10, 10,	11,	12,	21, 23, 7, 26, 27, 22, 24,	28, 30, 31, 29, 31,	32, 34, 35, 33, 35,	36, 37, 38, 37, 37, 39, 39,															117,

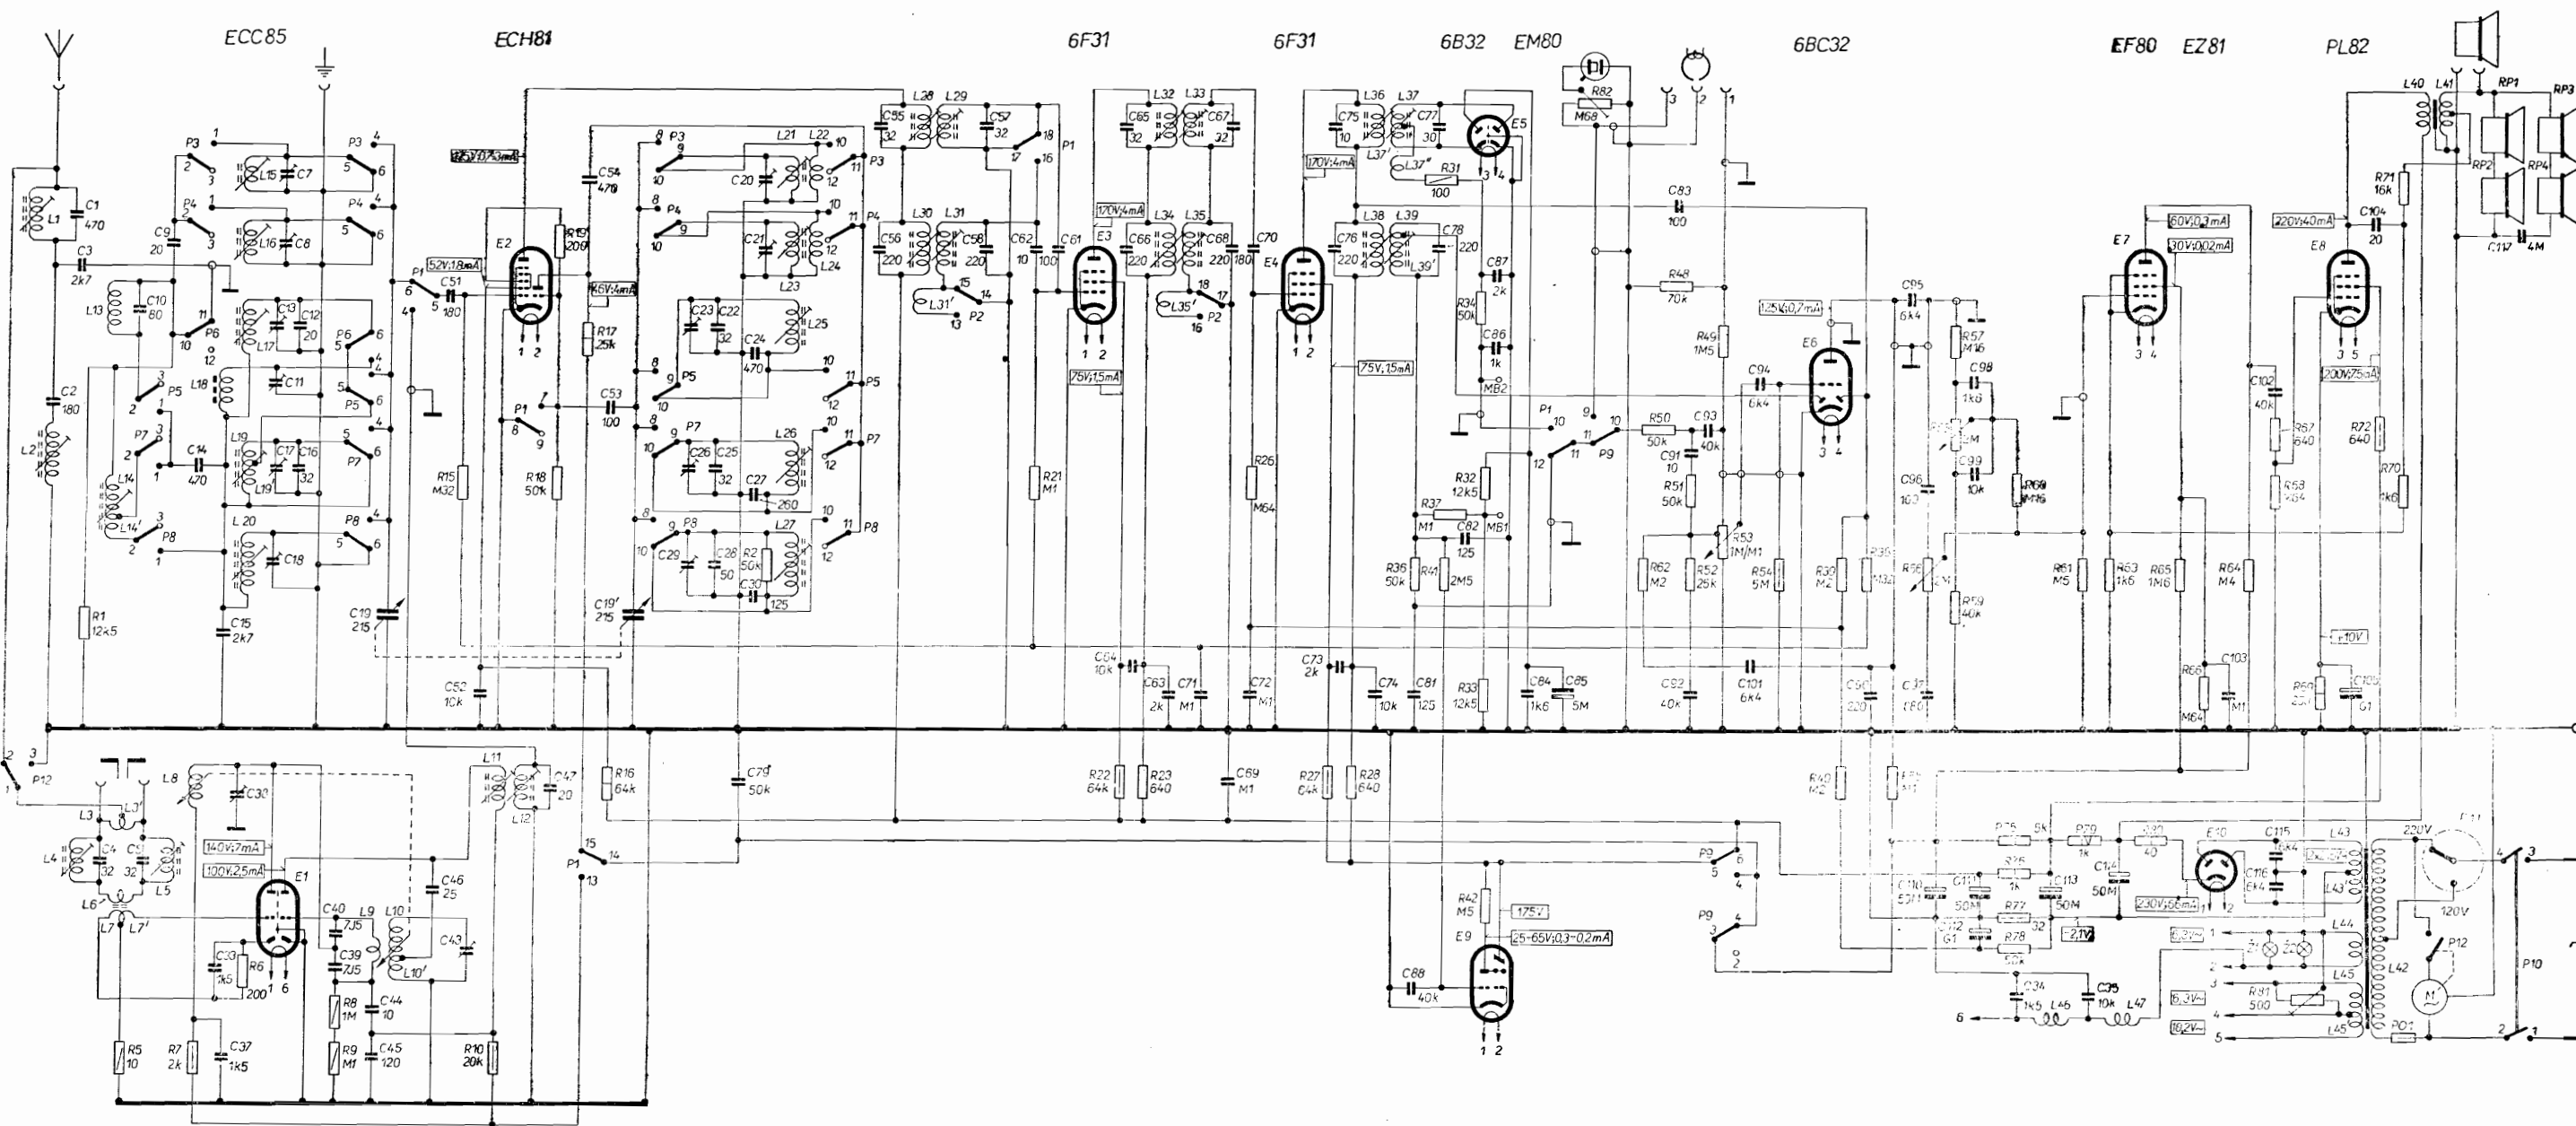

TLAČÍTKOVÝ PŘEPÍNAČ P1-P10

TLAČÍTKO OZNAČENÉ	STISKNUTÍM TLAČÍTKA MENÍ SE SPOJENÍ TAKTO:	
	SPOJÍ SE	ROZPOJÍ SE
VYP. P10		1 - 2, 3 - 4,
GRAMO P9	3 - 2, 5 - 4, 9 - 10,	3 - 4, 5 - 6, 10 - 11,
L.V. P8	1 - 2, 4 - 5, 8 - 9, 10 - 11,	2 - 3, 5 - 6, 9 - 10, 11 - 12,
SVI P7	1 - 2, 4 - 5, 8 - 9, 10 - 11,	2 - 3, 5 - 6, 9 - 10, 11 - 12,
FERRIT P6	4 - 5, 10 - 12,	5 - 6, 10 - 11,
SVII P5	1 - 2, 4 - 5, 8 - 9, 10 - 11,	2 - 3, 5 - 6, 9 - 10, 11 - 12,
KVI P4	1 - 2, 4 - 5, 8 - 9, 10 - 11,	2 - 3, 5 - 6, 9 - 10, 11 - 12,
KVII P3	1 - 2, 4 - 5, 8 - 9, 10 - 11,	2 - 3, 5 - 6, 9 - 10, 11 - 12,
V.V. P2	13 - 14, 16 - 17,	14 - 15, 17 - 18,
P1	4 - 5, 7 - 8, 10 - 11, 13 - 14, 16 - 17,	5 - 6, 8 - 9, 11 - 12, 14 - 15, 17 - 18,